



Panasonic Lumix DMC-ZS3 Back Cover Replacement

Replace the back cover of your Panasonic Lumix DMC-ZS3

Written By: Juan Pablo Quinonez Weston



INTRODUCTION

Use this guide to replace the back cover which houses the back panel buttons and LCD screen.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-


Step 1 — Back Cover



- Remove the following eleven screws securing the covers to the ZS3
 - Eleven 3 mm Phillips screws

⚠ Using too much pressure when removing the screws may strip the screws and complicate screw removal at a later time.


Step 2

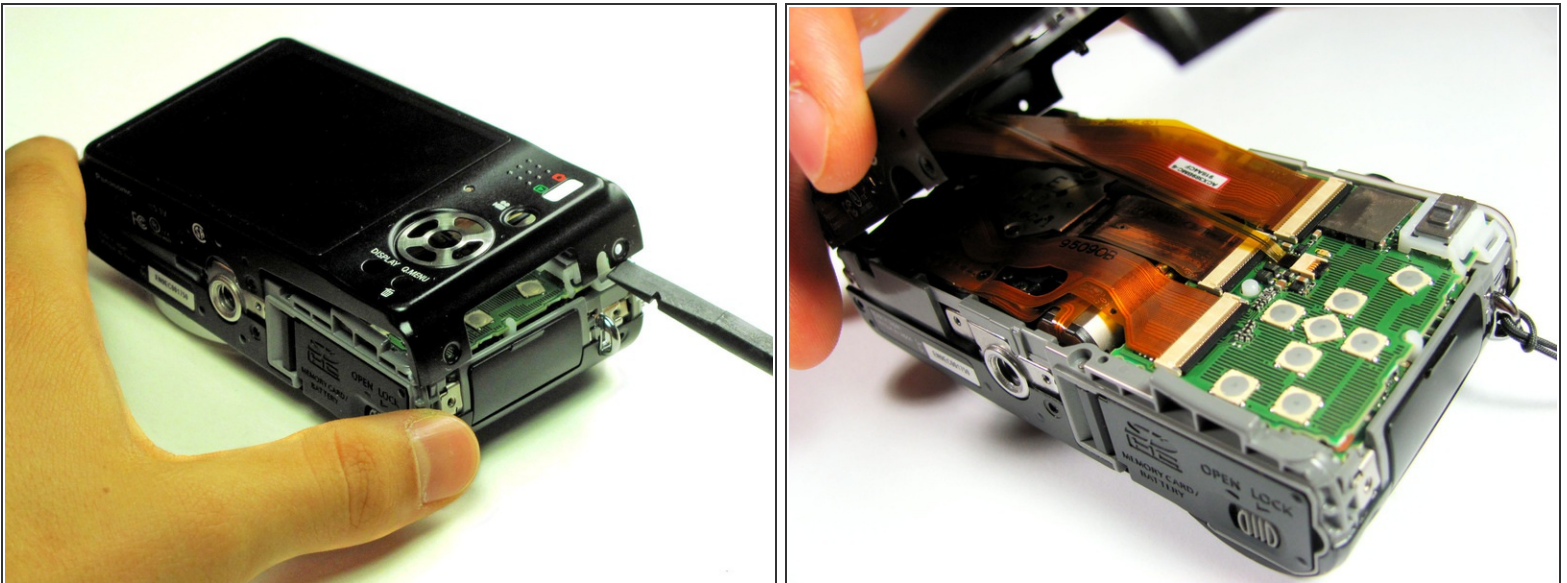

- Use the flat end of a spudger to pry apart the back cover from the rest of the unit as shown.

⚠ Be sure to carefully and slowly lift the back cover. Forcefully lifting the back cover and fully separating it at this point may ruin internal connections.

Step 3

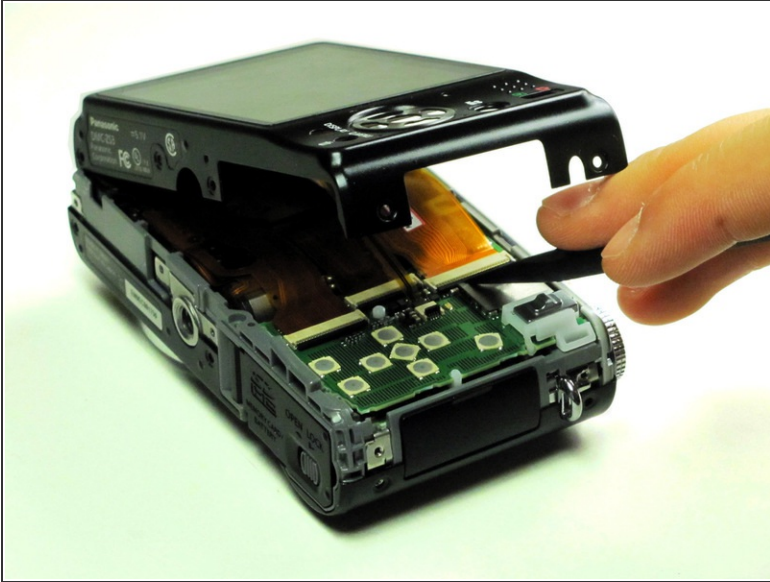

- Using your fingernail or a spudger, flip up the ZIF locking flap on the two LCD ribbon cable sockets that connect the back cover to the rest of the unit.

⚠ Be sure you are opening the locking tab, not pulling against the socket mounted to the board.

Step 4



- Remove the two LCD board ribbon cables out of their sockets.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 03:47:10 PM.